


## Outrigger Tip Assembly

### Step 1:

- Open the .5 ml tube of LOCTITE 263 by bending the cap and the tube until they become separated.

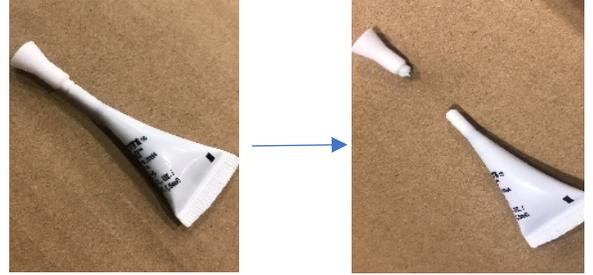


### Step 2:

- Locate the threads at the top of the outrigger.




### Step 3:

- Apply the opened tube of LOCTITE 263 from **Step 1** throughout threads found in **Step 2** by squeezing the tube with the tip on the threads.

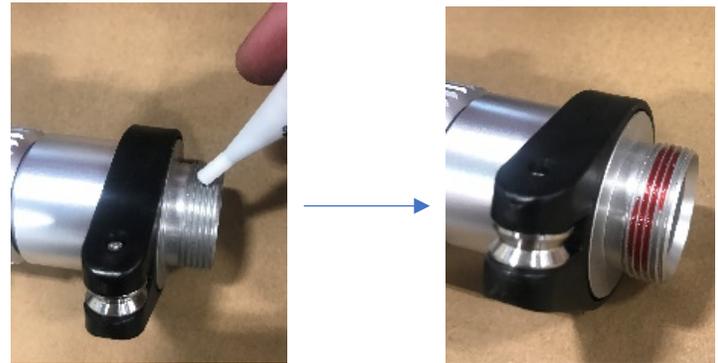

### Step 4:

- Apply the cone like tip onto the recently coated threads by twisting it clockwise until tight. Be sure to only hand tighten. (Do NOT use any tools)

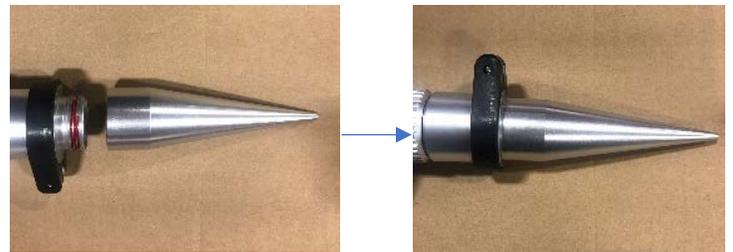

### Step 5:

- Let the applied LOCTITE 263 solidify and cure for 24 hours before use.